

Notes for replacing the LCD FCV-288

Follow the procedure below when replacing the LCD.





