

FFSAS | GDIS | BT222 11/01/2022



Model: TZT9F/12F/16F/19F



Model: TZT2BB

Intégration d'équipements Third Party via Ethernet

LISTE des PARTENAIRES compatibles

					Icone sur	Sc	reen M	lode		ID Address Configuration
Fabricant	Catégorie	Nom du Produit	Modèle	Website	Page d'Accueil	Full	Half (1/2)	Quart er (1/4)	IP Address	(Overview of procedures provided by partners)
OSCAR	Camera			https://www .oscar- navigation.c om/	OSCAR	~	~	V	172.31.2 01.40	Set up on a PC browser.
HP WATERM AKER	Water maker			http://www. hpwatermak er.it/en/s/ass ets/images/F uruno_part- net_eng.pdf	AND REARING	v	N/A	v	172.31.2 01.17	Set up on the 7" display's setting window.
Omnisen se	Thermal camera	Ulysis II	Ulysis II	https://omni sense.syste ms/store/pro duct/1		~	~	~	172.31.2 01.20 to 24	Set up on a PC browser.
Seakeepe r	Gyro stabilizer	Seakeeper 5" Display Unit	No specific model name	https://www .seakeeper.c om/	5 SEAKEEPER	~	~	~	Automati cally assigned by DHCP	Make sure that the software version is the latest. A 5" display unit comes with their system.



LISTE des PARTENAIRES compatibles

					lcon on	Sc	reen N	lode		IP Addross Configuration
Fabricant	Catégorie	Nom du Produit	Modèle	Website	Home Page	Full	Half (1/2)	Quart er (1/4)	IP Address	(Overview of procedures provided by partners)
Quick SpA	Gyro stabilizer, thruster, windlass, etc.	QNN Web Server	No specific model name	<u>https://www</u> .quickitaly.co m/en/home/	QNN Quick Network	~	~	r	172.31.20 1.11	QNN for FURUNO type is to be arranged by Quick. Make sure to arrange the FURUNO-compatible type/s.
Lumishor e	LED lighting	Lumi-Link Command Center	No specific model name (Part Number: 60-0366)	<u>https://www</u> <u>.lumishore.c</u> om/	LUMELINK	~	~	~	172.31.20 1.4	Purchase the following SD card to allow a user to change the settings of Command Center. Part Number: 60-0377
Shadow- Caster	LED lighting	Shadow- NET Bridge	SCM-MFD- Bridge	<u>https://shad</u> <u>ow-</u> <u>caster.com/</u>	Œ	۷	v	v	172.31.20 1.9	SCD-MFD-Bridge devices with software version 4.10 and later have the static IP address of 172.31.201.9. Make sure to double check about the IP address and setting procedures with their representatives prior to installation.
Victron Energy	Battery managem ent, inverter, charger	GX series	Cerbo GX CCGX Venus GX Oct GX CANvu GX Maxi GX MultiPlus-II GX EasySolar-II	<u>https://www</u> .victronener gy.com/		v	v	۷	172.31.20 1.12	For the device with display, set the IP address in [Settings] – [Ethernet]. For the device with built-in Wi-Fi, set the IP address on a connected remote console. For devices with built-in Bluetooth, set the IP address on the VictronConnect app.

PRINCIPE

Seules les TZT3 et TZT2BB ont cette capacité.

Comment ces appareils partenaires communiquent-ils avec les MFD ?

Chaque équipement Third Party dispose d'un serveur Web intégré, auquel les MFD accéderont via Ethernet pour afficher des images et contrôler les appareils en réseau.



Pour établir un réseau avec les MFD NavNet, assurez-vous que les appareils partenaires sont attribués avec les adresses IP dédiées par fabricant, pour l'IP statique, ou avec l'une des adresses IP dans la plage 172.31.201.xxx, pour le DHCP, comme indiqué dans les tableau ci-dessus



PRINCIPE

Comment ces appareils partenaires sont-ils détectés par les MFD ?

Les MFD ont des fichiers intégrés qui identifient les appareils partenaires en réseau. Dans le menu Service – [UTILITY] – [ACCESS MANAGER], vous pouvez voir des fichiers uniques nommés [xxx (partner name).enc]. Ces fichiers sont inclus dans le soft et les mises à jour des TZT3 / TZT2BB

Limitations

Un maximum de 5 systèmes tiers peuvent être mis en réseau dans le même réseau NavNet MFD.



PRINCIPE

Action et fonctionnement sur les MFD

(1) Mettez à jour les MFD avec les dernières versions logicielles pour qu'ils soient compatibles avec les appareils des partenaires cibles.

(2) Assurez-vous que l'appareil cible est attribué avec l'adresse IP dédiée de 172.31.201.xxx.

(3) Mettre le MFD en réseau avec l'appareil via Ethernet.

(4) Dans la page d'accueil, appuyez sur l'icône [+] pour créer une nouvelle page et confirmez que l'icône de l'appareil partenaire s'affiche.

(5) Sélectionnez l'appareil partenaire pour créer la page. Par exemple. Page d'accueil







OSCAR

Le système d'évitement de collision OSCAR offre le système pour éviter les collisions en utilisant des caméras principalement pour les yachts de course. Les cibles dangereuses sont identifiées avec une caméra pour générer une alarme. Le MFD peut être utilisé pour afficher l'image de la caméra et effectuer un zoom avant/arrière, etc.



Adresse IP requise pour OSCAR : 172.31.201.45

Configurez l'adresse IP ci-dessus à l'aide d'un navigateur PC.

Connectez-vous au réseau MFD à partir du port du processeur. En plus du plein écran, les modes écran demi (1/2) et quart (1/4) sont disponibles sur le MFD.



https://www.victronenergy.com/panel-systems-remote-monitoringVictron Energy propose un chargeur de batterie, un onduleur, des moniteurs de batterie, etc. Les modèles de serveur Web appelés série GX vous permettent de surveiller l'état de la batterie et de faire fonctionner les chargeurs sur des MFD en réseau.

ctron energy

Adresse IP requise pour Victron Energy : 172.31.201.12

Connectez les MFD au serveur Web de la série GX via Ethernet. Assurez-vous que l'adresse IP 172.31.201.12 est attribuée par les représentants de Victron Energy pour les paramètres suivants :

- ✓ Pour l'appareil avec écran, définissez l'adresse IP dans [Paramètres] – [Ethernet].
- ✓ Pour l'appareil avec Wi-Fi intégré, définissez l'adresse IP sur un écran distant connecté. Remarque : Une connexion par câble LAN est nécessaire pour modifier les paramètres

ethernet.

https://www.victronenergy.com/media/pg/Ce rbo GX Device Manual/en/accessing-the-gxdevice.html#UUID-4495e95a-8a13-b372-0e28-321ba38fb286

- Pour les appareils avec Bluetooth intégré, définissez l'adresse IP sur l'application VictronConnect.
- ✓ <u>https://www.victronenergy.com/media/pg/</u> <u>Cerbo_GX_Device_Manual/en/accessing-</u> <u>the-gx-device.html#UUID-58372221-d66e-</u> <u>e9e5-416f-dd3fc2026c6b</u>







https://www.quickitaly.com/en/products/quick-nautical-network-en/qnn-quick-nautical-network-en/qnn-en/Quick SpA propose un stabilisateur gyroscopique, un propulseur, un guindeau, un chargeur de batterie, etc., qui sont contrôlés via le système appelé QUICK Nautical Network (QNN). La page du navigateur sur les MFD peut activer le stabilisateur gyroscopique, enrouler l'ancre, faire fonctionner le propulseur, surveiller la batterie et entreprendre d'autres actions disponibles dans la page du navigateur.

Adresse IP requise pour ONN: 172.31.201.11 Quick dispose d'un serveur Web ONN dédié au réseau NavNet. Assurez-vous que le serveur compatible avec FURUNO est prévu pour une nouvelle installation. Pour les systèmes QNN déjà installés à bord, consultez les représentants de Quick afin de mettre en réseau les MFD NavNet. Connectez les MFD au réseau QNN via Ethernet et créez une page pour QNN sur la page d'accueil en écran complet, demi (1/2-split) ou quart (1/4split).





https://www.lumishore.com/lumi-link-smart-lighting/about-lumilinkLumishore propose un éclairage LED pour bateaux. Le serveur Web appelé Lumi-Link Command Center vous permet de contrôler les couleurs et la brillance des LED sur les MFD en réseau.



Adresse IP requise pour Lumishore : 172.31.201.4 Achetez la carte SD suivante pour permettre à un utilisateur de modifier les paramètres de Lumi-Link Command Center. Numéro de pièce : 60-0377 Pour les autres réglages et opérations, reportez-vous au Guide d'installation ou au Guide de configuration et d'utilisation du site Web Lumishore suivant. https://www.lumishore.com/lumi-link-smart-lighting/command-center







https://shadow-caster.com/product-detail/scm-mfd-lc/Shadow-Caster, basé aux États-Unis, propose un éclairage LED pour les bateaux. Le serveur Web appelé SCM-MFD-BRIDGE vous permet de contrôler les couleurs et la brillance des LED sur les MFD en réseau.



Adresse IP requise pour Shadow-Caster : 172.31.201.9 Le SCM-MFD BRIDGE avec le logiciel v4.10 et ultérieur a l'adresse IP statique ci-dessus par défaut. Connectez les MFD au SCM-MFD-BRIDGE via Ethernet et créez une page pour Shadow-Caster sur la page d'accueil - en plein écran, en demi (1/2-split) ou en quart (1/4-split).





Le HP WATERMAKER fabrique des produits de dessalinisation. Le contrôle des commutateurs, des vannes et des paramètres est disponible sur le MFD. Leur site Web présente également les procédures et quelques conseils.http://www.hpwatermaker.it/en/s/assets/images/Furuno_part-net_eng.pdf



Adresse IP requise pour HP WATERMAKER : 172.31.201.17 Configurez cette adresse IP sur la fenêtre de réglage de leur écran 7". Connectez-le au réseau à partir de l'écran 7" - port latéral arrière. Les modes plein écran et quart d'écran (1/4) sont disponibles sur le MFD.





https://www.omnisense-systems.com/en-gb/products/ulysses-marine-night-vision-system/#toggle-id-1La caméra thermique (Modèle : Ulysse II) peut être affichée et contrôlée à partir du MFD pour les opérations de panoramique/inclinaison/zoom, etc.Noter:Le suivi de cible ou le verrouillage de la caméra sur l'écran du traceur n'est pas disponible contrairement aux caméras FLIR.



Adresse IP requise pour Omnisense : 172.31.201.20 (à 24)

Configurez l'adresse IP ci-dessus à l'aide d'un navigateur PC. Lorsque plusieurs caméras doivent être mises en réseau, attribuez des adresses IP comprises entre 172.31.201.20 et 24. Connectez-vous au réseau MFD à partir du port du boîtier de connexion. En plus du plein écran, les modes écran demi (1/2) et quart (1/4) sont disponibles sur le MFD.





https://www.seakeeper.com/Seakeeper propose un stabilisateur gyroscopique pour stabiliser le mouvement de roulis du bateau pour une variété de tailles et de types de bateaux. Le gyroscope commence à fonctionner après la mise sous tension. Alors qu'il faut généralement plus de 30 minutes pour se préparer à stabiliser le bateau, l'écran tactile de 5 pouces affiche le régime du gyroscope pour voir l'état de stabilisation prêt. Les MFD aident à afficher le régime gyroscopique et à activer la fonction de stabilisation sur un grand écran.

Gyro Stabilizer	Gyro (inside stabilizer)	5″ Touch Display
and the second	1 and a second	4
CH STA		
The second	HE	City and
	1 to a	SELF TEST SCREEN TEST

Aucune exigence d'adresse IP statique

Avec TZT9F/12F/16F/19F v2.01 et TZT2BB v8.01 et versions ultérieures, la fonction de serveur DHCP est implémentée (par défaut : ON, plage : 172.31.254.1 à 172.31.254.254), afin qu'il puisse être mis en réseau avec Seakeeper.

Pour information : Le paramètre DHCP Control ON/OFF est disponible dans l'onglet [Service Menu] - [Utility] - [DHCP Control] - [ON]/[OFF].

L'écran tactile 5" dispose d'un serveur Web pour communiquer avec les MFD via Ethernet, de sorte que l'écran 5" est toujours nécessaire bien que les MFD soient utilisés pour contrôler l'appareil. Le câble LAN pour écran 5" a le connecteur NMEA2000 à une extrémité (pour l'écran) et RJ45 à l'autre (pour le port Ethernet générique comme les MFD NavNet). Assurezvous que la version logicielle de l'écran est la plus récente.





SOR TEST





NOUVEAU BESOIN ?

Il est possible de rendre compatible les TZT3 et TZT2BB avec de nouveaux équipements. Pour cela, veuillez suivre les étapes suivantes :

No	Category	Check	Action by Partner
-	LITMI	Make sure that the web server of their device is designed with <u>HTML</u> .	Check either one.
1	HIML	(Note: Our MFDs are compatible with HTML5.)	🗆 Yes / 🗆 No
		Make sure that their device is compatible with assignment of Class B IP	Check either one.
		address range, i.e. 172.31.201.xxx.	🗆 Yes / 🗆 No
2	IP Address	Our MFDs have the DHCP server function for TZT9F/12F/16F/19F v2.01	
		and TZT2BB v8.01 and later. The assigned IP address range by these	
		MFDs is 172.31.254.xxx (Subnet Mask: 255.255.0.0) in Class B.	

Cat. 1 – Common Check Items

Check the following items required for all partners.

No	Item	Requirement	Check	Action by Partner
1	Icon	Mandatory	Prepare a 256×256 PNG file.	Send the file.
2	Background	Mandatory	The background color of the icon in True Color RGBA	State RGBA information:
	Color of		so that we can	
	Icon		fill in the gap of	
			Home page icon.	
3	Screen	Mandatory	The table below shows the resolution of each screen	Check the required one(s).
	Design		mode per MFD models. Check in which screen	Full Screen
			mode(s) your browser page should be displayed on	Half Screen
			our MFDs, e.g. Full and Quarter screens only.	Quarter Screen
4	Access Port	Mandatory	Our MFDs use the ${\bf port\ number\ 80}$ by default in	Check either one.
	No.		order to access third party devices. If other port	OK with port number 80
			numbers are to be used, advise of the port number	Not (state the port no.)
			in use.	Port Number:
5	DHCP or	Mandatory	Our MFDs can be a DHCP, which can assign an IP	Check the required one.
	Static IP		address in the Class B range of 172.31.201.xxx	DHCP (See Cat. 2)
			to networked devices. Check if the partner's device	or
			works with DHCP (See Cat. 2) or with a static IP	Static (See Cat. 3)
			address (See Cat. 3).	

	Screen Modes ve	5. Resolutions						
	Screen Mode	TZT9F/16F/19F	TZT12F	TZT2BB				
	Evill Commen	1280×720	1280×800	Different depending on connected monitor resolutions:				
	Full Screen			[Full HD	SXGA	XGA]
	(1/1)				1280×720	1280×1024	1280×960	
	Half Screen	640×720		Different depending on connected monitor resolutions:				
			640×800		Full HD	SXGA	XGA	
	(1/2)			[640×720	640×1024	640×960	
	0			Differ	ent depending	on connected m	onitor resolutio	ns:
	Quarter Screen	640×360	640×400		Full HD	SXGA	XGA	
	(1/4)				640×360	640×512	640×480	



NOUVEAU BESOIN ?

Cat. 2 – Check Items for DHCP Network

If the partner's device is to be connected via DHCP, review these items.

No	Item	Requirement	Check / Action by Partner			
1	mDNS Service Name	Mandatory	This is a key for searching your device. E.g. items in see yellow marker.			
			<pre><?xml version="1.0" standalone='no'?><!--*-nxml-*--></pre>			
			service-group SYSTEM "avahi-service.dtd"			
			<service-group></service-group>			
			<service></service>			
			<type>_furunoXXXtcp </type>			
			<port>8080</port>			
			<txt-record><u>spec_version</u> =1</txt-record>			
			<txt-record>config_version =1</txt-record>			
			<txt-record>icon =/img/icon.png</txt-record>			
			<txt-record>home_path =/index.html</txt-record>			
			Describe the specification:			
2	mDNS Service Entry	Optional	E.g. see items in yellow marker.			
	for home_path		<pre>signal standalone='no'?><!--*-nxml-*--></pre>			
			<pre><!DOCTYPE service-group SYSTEM "avahi-service.dtd"> </pre>			
			<service-group></service-group>			
			<service></service>			
			<type>_furunoXXXtcp. </type>			
			<port>8080</port>			
			<txt-record>spec_version =1</txt-record>			
			<txt-record>config_version =1</txt-record>			
			<txt-record>icon =/img/icon.png</txt-record>			
			<txt-record>home_path =/index.html</txt-record>			
			Describe the specification:			
3	mDNS Service Entry	Optional	If the device contains the icon data inside the device, where our MFDs			
	for Icon		can refer to, advise of its service entry. E.g. items in yellow marker.			
			<pre><?xml version="1.0" standalone='no'?><!--*-nxml-*--></pre>			
			service-group SYSTEM "avahi-service.dtd"			
			<service-group></service-group>			
			<service></service>			
			<type>_furunoXXXtcp </type>			



Cat. 3 – Check Items for Static IP

Check the following item if the partner's device uses a static IP.

No	Item	Requirement	Check
1	Static IP	Mandatory	Make sure that their device is compatible with a static Class ${\bf B}$ IP address, i.e.
			172.31.201.xxx (Subnet Mask: 255.255.0.0).
			(FEC will assign one of the IP addresses, unique one to not be duplicated with other
			partners already assigned with static IPs for network with our MFDs.)

Installing the .enc file on MFD

1950214-02.01 SCREEN TEST SENSOR TEST UTILITY

Install the prepared enc file to the MFD in the Service Menu using a USB.

- (1) Copy the .enc file to the root of USB.
- (2) Insert the USB to the MFD USB port.

(3) On the MFD, access the Service Menu. ([Settings] - [Initial Setup] - [Service] and enter the password)

- (4) In the Service Menu, access the [UTILITY] – [ACCESS MANAGER] tab.
- (5) Tap [Install From USB].

DATA/FILE	WLAN MONITOR	ACCESS	BROW	SER CAN BUS MONITOR	
Auto Fill	Scan	A	ctive Product Slot		Clear all slot
Click/Tap here to sci	Click/Ta here to set	12	<u>Click/Tap</u> <u>here_to</u> <u>set</u>	<u>Click/Tap</u> <u>here to</u> <u>sot</u>	Click/Tap here to set
Installed Browser Acce HPWATERMAKER_3	ess Page List		Product Li	ist from installed Access I MAKER_3-HP WATERMAKER	Page 172.31.201.17 Edt
Lumishore_2			Lumishore	2-Lumi-Link	172.31.201.4 Edit
OSCAR_3			OSCAR,34	OSCAR_System	172.31.201.45.8080 Edit
Omnisense_1			 Omnisense 	L1-Ulyases	172.31.201.20 Edit
QUICK			UICK-QN	N	172.31.201 11 Edit
Install From USB		Benove		Reset to defe	ut

EXIT SERVICEMAN

POWER OFF



(6) In the pop-up message, select the file to install. [] mark will appear. Tap [OK].

(7) The message box [Do you want to add installed enc to

available empty slot?] appears. Tap [Yes].



- (8) Check that the target enc file is available in the[Installed Browser Access Page List] and [Product List from Installed
- Access Page]. The icon for the partner is also shown on one of the [Click/Tap here to set] boxes.

1950214-02.01 SELF TEST	SCREEN TEST	SENSOR TEST	UTILITY		POWER C	FF
DATA/FILE	WLAN MONITOR	ACCESS MANAGER	BROWSER	CAN BUS MONITOR	1 -	
Auto Fi	ll Scan	Active Pr	roduct Slot	c	lear all slot	
Cick/Tap image to modify	Click/Ta here to set	p <u>Click</u> <u>here</u>	/Tap a to et	<u>Click/Tap</u> <u>here to</u> <u>set</u>	<u>Click/Tap</u> <u>here to</u> <u>set</u>	
nstalled Browser Ac	cess Page List		Product List from	installed Access Pag	e	
QUICK			HPWATERMAKER_3	HP WATERMAKER	172.31.201.17	Edit
Seakeeper_2			Lumishore_2-Lumi-L	ink	172.31.201.4	Edit
Shadow-Caster			MZ-LINK-MZ-LINK		172.31.201.47	Edit
Tecnoseal			OSCAR_3-OSCAR_S	ystem	72.31.201.45.8080	Edit
VictronEnergy_2			Omnisense_1-Ulysse	5	172.31.201.20	Edit
Install From USE		Remove		Reset to default		_

Test by Partners, etc.

After the enc file is implemented on MFDs, it will be tested by the partner for their approval. If their device is provided to FURUNO, it will also be tested by FURUNO.

5.4. Compatibility with Additional Partners

When compatible partners are added, gnc files [xxx (partner name).gnc] for new partners are required in order to identify their devices in the network and show partner logos on the Home page to create a page.

If software update is planned soon...

These new [xxx (partner name),enc] files will be added to the software update packages: Update each MFD to the latest versions to enclose all the new files in the MFD.

If NO software update is planned in the near future...

Install the [xxx (partner name).enc] files of new partner devices in the Service Menu via a USB jump drive before networking the MFDs with the partner devices.