# **SEAVIEV//** *elevate your electronics*

•

•


### INSTALLATION INSTRUCTIONS

For Seaview Modular Top Plate: ADA-S2


Refer to website for most up to date instructions and videos.

WWW.SEAVIEWGLOBAL.COM

### PARTS INCLUDED

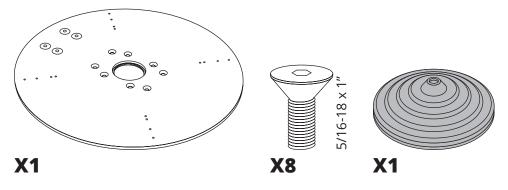


#### **TOOLS NEEDED**

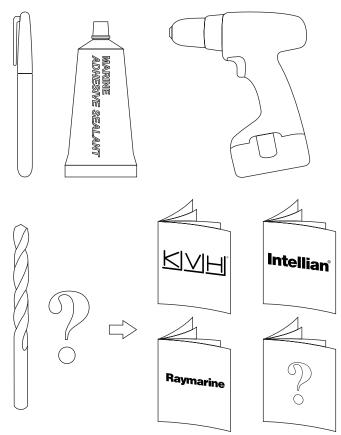



Locate the Make and Model of your satellite dome on this chart and determine which drill hole number yours is. Then place the ADA-S2 Drill Template ontop of the ADA-S2.


1	Intellian	i6, i6P, k6, d6, S6HD, FB500
1	кvн	M7, M7SK, HD7, V7, TV6, FB500(26"), V3-IP(24")
2	VDO	Ocean Line 345, 360, 445 ,460
3	Intellian	i4, i4P, k4, d4, i5
3	күн	M5, TRAC 50, TV5, FB250(18"), V7IP, VHTS
3	Raymarine	45STV
3	SEA-TEL (COBHAM)	ST14, FX150, C18, FX250
4	кvн	TracPhone V7-IP

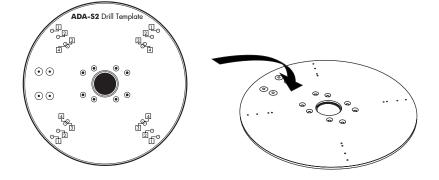


2 Once you determine which drill hole number you require mark the four holes.


## 3


Drill the four marked holes. Be sure to check with your marine electronic manufacturers manual to determine what size drill bit is needed.

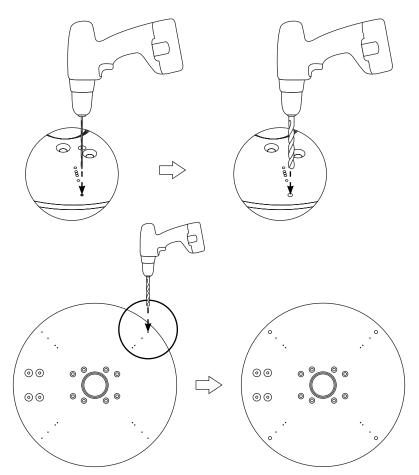

Apply marine adhesive sealant along the lip in the center hole on the ADA-S2. Route the cabling through the center hole in the ADA-S2. Then insert through the black rubber grommet. When inserting the black rubber grommet into the ADA-S2 be sure that the center lip falls into the groove in the grommet.

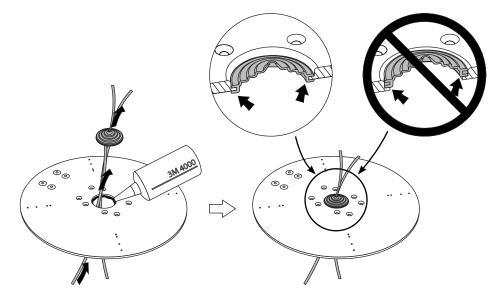

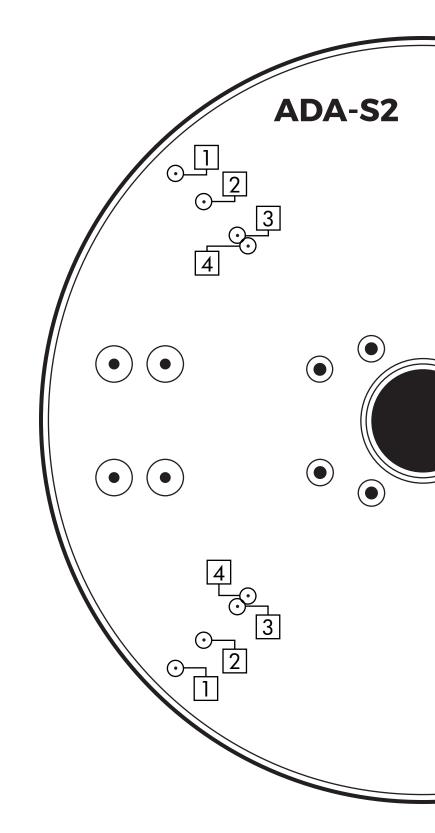

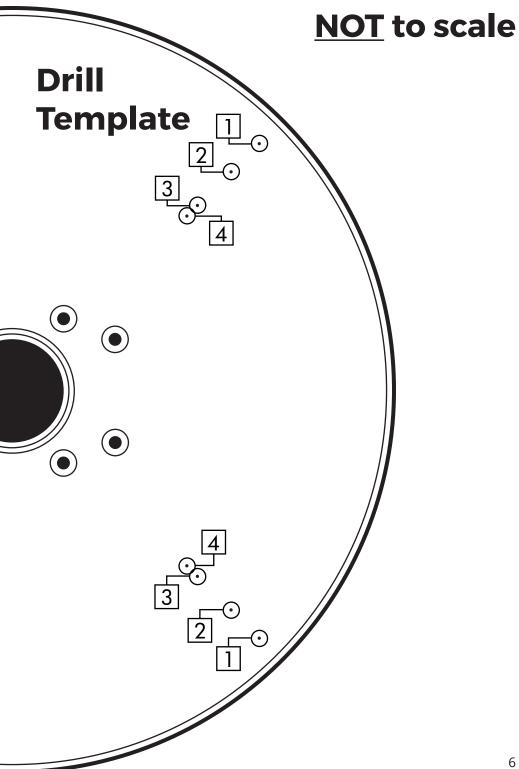

### **SEAVIEV//** ELEVATE YOUR ELECTRONICS



Tel: 800-655-7922 www.seaviewglobal.com

#### EUROPEAN OFFICE

Tel: +33 4 94 53 27 70 www.seaviewprogress.com 3-062618